


Examine all packaging material for small parts that may have come loose during shipment. Periodic checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for future reference. Adult assembly required. Online Parts Request: [parts.request@hillsdalefurniture.com](mailto:parts.request@hillsdalefurniture.com) - Customer Service Phone Number: 502-562-0000

**HARDWARE LIST**

- A (6) Allen Bolts 1/4" x 1-1/4"
- B (8) Allen Bolts 1/4" x 3/4"
- C (4) Allen Bolts 1/4" x 1/2"
- D (2) Allen Bolts 1/4" x 1"
- E (20) Spring Washers 1/4"
- F (8) Flat Washers 1/4"
- G (4) Small Camber Washers
- H (8) Large Camber Washers
- J (4) Wood Screws
- K (1) Allen Wrench 4mm

**PARTS LIST**

- L (1) Stool Back
- M (1) Seat Base
- N (1) Seat Cushion
- O (1) Stool Base
- P (2) Front Legs
- R (2) Rear Legs
- S (1) Foot Support
- T (1) Cross Brace

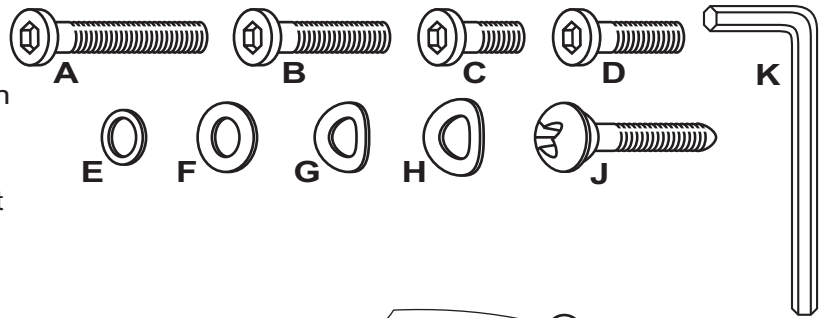

**STEP 1**

Begin assembly by inserting each post on Stool Back (L) into the open holes on the back side of the Seat base (M) and securing using 1 Allen Bolt (A), 1 Spring Washer (E) & 1 Flat Washer (F) per each side. Tighten all bolts using the Allen Wrench (K) provided.

**STEP 2**

Next, attach each Front & Rear Leg (P & R) to the bottom of the Stool Base (O) using 2 Allen Bolts (B), 2 Spring Washers (E) & 2 Large Camber Washers (H) per each leg. Do not fully tighten bolts.

**STEP 3**

Attach the Cross Brace (T) to each Leg (P & R) by setting over each metal tab and securing using 1 Allen Bolt (C), 1 Spring Washer (E) & 1 Small Camber Washer (G) per each leg. Only hand tighten bolts.

**Note:** The Upright of the back must be consistent with the direction of the Front Legs

**STEP 4**

Attach the Foot Support (S) to each Front Leg (P) by inserting each post into place and securing using 1 Allen Bolt (D), 1 Spring Washer (E) & 1 Flat Washer (F) per each side. Tighten all bolts from Steps 2 through 4.

**STEP 5**

Attach the Seat Base (O) to the Stool Base (M) by inserting 4 Allen Bolts (A), 4 Spring Washers (E) & 4 Flat Washers (F) through the cross bars and into the swivel metal plate. Tighten all bolts.

**STEP 6**

Finally, attach the Seat Cushion (N) to the Seat Base (M) using 4 Wood Screws (J) to secure tight in place. Only tighten screws using a phillips head screwdriver (not included). The assembly is now complete.

